

Morbella

HD DIGITAL RECORDER



USER MANUAL

Trademarks

All brand and product names are trademarks or registered trademarks of Maka GPS Technologies Group. In association with Maka GPS Technologies Private Limited (Singapore), Maka GPS Technologies Sdn. Bhd. (Malaysia), Maka Technologies Group (H.K.) Limited.

The information in this manual is subject to change without notice.

www.makagps.com

12/2016. R1.0

Safety information

To prevent injury to yourself and others or damage to your device, read the safety information about your device before using the device.



Warning

Failure to comply with safety warnings and regulations can cause serious injury or death.

Do not use damaged power cords or plugs, or loose electrical sockets

Unsecured connections can cause electric shock or fire.

Do not touch the car charger with wet hands or disconnect the charger by pulling the cord

Doing so may result in electrocution.

Do not bend or damage the car charger

Doing so may cause electric shock or fire.

Do not use your device while it is charging or touch your device with wet hands

Doing so may cause electric shock.

Do not short-circuit the charger or the device

Doing so may cause electric shock or fire, or the battery may malfunction or explode.



Use manufacturer-approved batteries, chargers, accessories, and supplies

- Using generic batteries or chargers may shorten the life of your device or cause the device to malfunction. They may also cause a fire or cause the battery to explode.
- Use only Maka GPS Technologies Group-approved battery and charger specifically designed for your device. Incompatible battery and charger can cause serious injuries or damage to your device.
- Maka GPS Technologies Group cannot be responsible for the user's safety when using accessories or supplies that are not approved by Maka GPS Technologies Group.

Do not drop or cause an impact to the charger or the device.

Handle and dispose of the device and charger with care

- Never dispose of the battery or device in a fire. Never place the battery or device on or in heating devices, such as microwave ovens, stoves, or radiators. The device may explode when overheated. Follow all local regulations when disposing of used battery or device.
- Never crush or puncture the device.
- Avoid exposing the device to high external pressure, which can lead to an internal short circuit and overheating.

Protect the device, battery and charger from damage

- Avoid exposing your device and battery to very cold or very hot temperatures.

Morbella

- Extreme temperatures can damage the device and reduce the charging capacity and life of your device and battery.
- Prevent the battery from coming into contact with metal objects, as this can create a connection between the + and – terminals of your battery and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

Do not bite or suck the device or the battery

- Doing so may damage the device or result in an explosion or fire. • Children or animals can choke on small parts.
- If children use the device, make sure that they use the device properly.

Do not handle a damaged or leaking Lithium Ion (Li-Ion) battery

For safe disposal of your Li-Ion battery, contact your nearest authorised service centre



Caution

Failure to comply with safety cautions and regulations can cause injury or property damage

Do not use your device near other electronic devices

Most electronic devices use radio frequency signals. Your device may interfere with other electronic devices.

Do not expose the device to heavy smoke or fumes

Doing so may damage the outside of the device or cause it to malfunction.

Do not use your device near devices or apparatuses that emit radio frequencies, such as sound systems or radio towers

Radio frequencies may cause your device to malfunction.

If you notice strange smells or sounds coming from your device or the battery, or if you see smoke or liquids leaking from the device or battery, stop using the device immediately and take it to a Maka Service Centre

Failure to do so may result in fire or explosion.

For your own safety, do not operate the controls of the product while driving.

Two window mounts are needed when using the recorder in a car. Make sure that you place the recorder in an appropriate place, so as not to obstruct the driver's view.

Make sure that no object is blocking the camera lens and no reflective material appears near the lens.

Please keep the lens clean. If the car's windscreen is tinted with a dark solar film coating, it may affect the recording quality.

Morbella

Do not store your device in very hot or very cold areas. It is recommended to use your device at temperatures from 0 °C to 60 °C and humidity from 10% to 80%

Doing so may cause the screen to malfunction, result in damage to the device, or cause the battery to explode.

Do not use your device or applications for a while if the device is overheated

Prolonged exposure of your skin to an overheated device may cause low temperature burn symptoms, such as red spots and pigmentation.

Install mobile devices and equipment with caution

- Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted.
- Avoid placing your device and accessories near or in an airbag deployment area. Improperly installed wired equipment can cause serious injury when airbags inflate rapidly.

Do not drop your device or cause impacts to your device

- Your device may be damaged or may malfunction.
- If bent or deformed, your device may be damaged or parts may malfunction.

Ensure maximum battery and charger life

- Avoid charging your device for more than a week, as overcharging may shorten battery life.
- Over time, unused device will discharge and must be recharged before use.
- Disconnect the charger from power sources when not in use.

Morbella

- Leaving batteries unused over time may reduce their lifespan and performance. It may also cause the batteries to malfunction or explode, or cause a fire.
- Your device may wear out over time. Some parts and repairs are covered by the warranty within the validity period, but damages or deterioration caused by using unapproved accessories are not.

Do not disassemble, modify, or repair your device

- Any changes or modifications to your device can void your manufacturer's warranty. If your device needs servicing, take your device to a Maka Service Centre.
- Do not disassemble or puncture the battery, as this can cause explosion or fire.
- Turn off the device before removing the battery. If you remove the battery with the device turned on, it may cause the device to malfunction.

When cleaning your device, mind the following

- Wipe your device or charger with a towel or an eraser.
- Do not use chemicals or detergents. Doing so may discolour or corrode the outside the device or may result in electric shock or fire.

Do not distribute copyright-protected material

Do not distribute copyright-protected material without the permission of the content owners. Doing this may violate copyright laws. The manufacturer is not liable for any legal issues caused by the user's illegal use of copyrighted material.

Correct disposal of this product



(Waste Electrical & Electronic Equipment)

(Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.



Disclaimer

Some content and services accessible through this device belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Such content and services are provided solely for your personal non-commercial use.

You may not use any content or services in a manner that has not been authorised by the content owner or service provider. Without limiting the foregoing, unless expressly authorised by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device.

"THIRD PARTY CONTENT AND SERVICES ARE PROVIDED "AS IS." MAKa GPS TECHNOLOGIES GROUP DOES NOT WARRANT CONTENT OR SERVICES SO PROVIDED, EITHER EXPRESSLY OR IMPLIEDLY, FOR ANY PURPOSE. MAKa EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. MAKa GPS TECHNOLOGIES GROUP DOES NOT GUARANTEE THE ACCURACY, VALIDITY, TIMELINESS, LEGALITY, OR COMPLETENESS OF ANY CONTENT OR SERVICE MADE AVAILABLE THROUGH THIS DEVICE AND UNDER NO CIRCUMSTANCES, INCLUDING NEGLIGENCE, SHALL MAKa GPS TECHNOLOGIES GROUP BE LIABLE, WHETHER IN CONTRACT OR TORT, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, ATTORNEY FEES, EXPENSES, OR ANY OTHER DAMAGES ARISING OUT OF, OR IN CONNECTION WITH, ANY INFORMATION CONTAINED IN, OR AS A RESULT OF THE USE OF ANY CONTENT OR SERVICE BY YOU OR ANY THIRD PARTY, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES."

Third party services may be terminated or interrupted at any time, and Maka GPS Technologies Group makes no representation or warranty that any



content or service will remain available for any period of time. Content and services are transmitted by third parties by means of networks and transmission facilities over which Maka GPS Technologies Group has no control. Without limiting the generality of this disclaimer, Maka GPS Technologies Group expressly disclaims any responsibility or liability for any interruption or suspension of any content or service made available through this device.

Maka GPS Technologies Group is neither responsible nor liable for customer service related to the content and services. Any question or request for service relating to the content or services should be made directly to the respective content and service providers.

About this manual

This device provides high quality digital recording device using Maka's high standards and technological expertise. This user manual is specially designed to detail the device's functions and features.

- Please read this manual before using the device to ensure safe and proper use. Descriptions are based on the device's default settings.
- Images and screenshots may differ in appearance from the actual product.
- Content may differ from the final product, or from software provided by service providers and is subject to change without prior notice.
- For the latest version of the manual, refer to the Maka website at www.makagps.com.
- Available features and additional services may vary by device, software.
- Applications and their functions may vary by country, region, or hardware specifications.
- Maka is not liable for performance issues caused by applications from any provider other than Maka.
- Maka is not liable for performance issues or incompatibilities caused by not installing the device as stated in this manual. Attempting to customise the installation may cause the device or applications to work improperly. This may result in device malfunctions and data corruption or loss. These actions are violations of your Maka agreement and will void your warranty.
- Default applications that come with the device are subject to updates and may no longer be supported without prior notice. If you have questions about an application provided with the device, contact Maka Service Centre.

Table of Contents

Product Specifications	14
Getting Started	
Overview of your VR4 FHD Digital Roadcorder™	
Device Layout	15
Understanding of your VR4 FHD Digital Roadcorder™	
Buttons	16
Status Icons	17
Standard Packaging of your VR4 FHD Digital Roadcorder™	
Package Contents	18
Installation of your VR4 FHD Digital Roadcorder™	
Installation	19
Charging the Battery	20
Inserting Memory Card	21
Removing Memory Card	22
Formatting Memory Card	22-23
Operation of your VR4 FHD Digital Roadcorder™	
Turning the device on and off	24
<u>Video Setting</u>	
Recording Mode (Resolution)	25
Loop Recording	25-26
Exposure	26
Motion Detector	26-27
Record Audio	27-28

Table of Contents

Operation of your VR4 FHD Digital Roadcorder™

Date and Time Stamp	28
Gravity Sensing	28
<u>System Setting</u>	
Date/ Time Setup	29
Auto Power Off	29
Screen Saver	30
Beep Sound	30
Language	31
TV Mode	31
Frequency	32
Default Setting	32
Format	22-23
<u>Photo Setting</u>	
Photo Mode (Resolution)	33
Sequence	33
Quality	34
Sharpness	34
White Balance	35
ISO	35
Exposure	36
Anti-Shake	36
Quick Review	37
Date-Stamp	37
<u>General</u>	
Playback Mode (Video)	38
Delete Files	38
Playback mode (photo)	39
Delete file (photo)	39

Product Specifications

Light sensor	1MP CMOS sensors (GC1043)
Lens	High resolution ultra wide angle lens (120°) F=2.2, f=3.2
LCD	3.19 inch 16:9 TFT LCD
Audio	Built-in high sensitivity microphone/speaker
External Memory	Class 10 or above TF card(SDHC specification up to 32G)
Gravity sensor	Sensitivity low/medium/high/OFF
Motion detect	ON/OFF
Shutter	Electronic shutter
White balance	Auto
Exposure	Auto ISO
TV interface	HDMI
Battery (optional)	150mAh 3.7V rechargeable lithium battery
Video format	AVI
Video resolution	1920x1080P30, 1440x1080P30, 1280x720P30, 848x480P30, 640x480P30
Photo resolution	VGA, 1.3M, 2M, 3M, 5M, 8M, 10M, 12M
Language	English, Traditional Chinese, France, Spanish, Portuguese, Deutsch, Italian, Russian Japan, Korea, Turkish
USB	USB 2.0
Loop recording	OFF/1min/2 min/3 min/5min
Auto screen off	OFF/3 min/5 min/10min
AutoShut down	OFF/1min/3min
Microphone mute	ON/OFF








Device Layout













 

- | | |
|--------------------------|-----------------------------|
| 1. HDMI | 09. Manual Lock File Button |
| 2. USB Charging Port | 10. On/Off Button |
| 3. Micro Sd Card Slot | 11. Mic |
| 4. Up Button | 12. Reset |
| 5. Menu Button | 13. Suction Holder Slot |
| 6. Down Button | 14. Red LED (when charging) |
| 7. Rec/Stop/Enter Button | 15. Blue LED (Device on) |
| 8. Mode Button | |

Morbella

Buttons

Button	Functions
	Press and hold to turn the device on or off.
OK	Press to Start/Stop recording and also acts as a button to confirm your selection in menu setting mode.
MENU 	Press  to enter and exit Setting mode
 UP / Down 	Press to navigate to the preferred functions required during Menu Setting. Hot Keys during recording mode: <ul style="list-style-type: none">• Press UP button once to turn off/on microphone during recording
MODE	Press  to toggle between Recording/Photo/Playback mode
Lock 	The button acts as a manual lock file during recording.
RESET	Press and hold for more than 3 seconds to reset the device if it has fatal errors or hang-ups, or freezes.

Status Icons

Icon	Meaning
	Memory Card Inserted
	Video Recording Mode
	Loop Recording
	Battery Power Level
	Microphone Mute
	Microphone On
	Charging via USB Charger
	Video Playback Mode
	Photo Mode
	White Balance Status
	Sequence on (5 photo taken per shot)
	Lock File

Package contents

Check the product box for the following items:

- VR4 Front Camera
- Operating Manual
- Mounting holder for camera (Suction Mount Type – **Optional Accessory**)
- Mounting holder for camera (3M Mount Type)
- USB Cable
- Car Charger

The items supplied with the device and any available accessories may vary depending on the region. The supplied items are designed only for this device and may not be compatible with other devices.

Appearances and specifications are subject to change without prior notice. Malfunctions caused by using unapproved accessories are not covered by the warranty service. Availability of all accessories is subject to change depending entirely on manufacturing companies. For more information about available accessories, refer to the Maka GPS Technologies Group website.

Installation

1 Fixing the camera to the window mount

It is compulsory for window mount to be fixed up before using the device in a car. Make sure that you place the recorder in an appropriate place, so as not to obstruct the driver's view.

2 Connecting charger to the cigarette lighter

Connect only the manufacturer-approved charger supplied with your device. Use only Maka GPS Technologies Group-approved charger specifically designed for your device. Incompatible charger can cause serious injuries or damage to your device.


3 Inserting a memory card

You have to insert a memory card before you can start recording. The recorder supports Micro SD cards with up to 32GB capacity. You are advised to use a Class 10 memory card with at least 8GB capacity. DO NOT insert or remove the memory card when operating the device.

Charging the battery

Use the charger to charge the battery before using it for the first time. Charge the device by connecting front camera via the USB car charger. Use only Maka-approved chargers, batteries, and cables. Unapproved chargers or cables can cause the battery to explode or damage the device.

Connect the USB car charger's jack to the USB charging port and then plug the charger into the car cigarette lighter socket.

- When device detects no power supply, it will automatically switch off in 5 seconds time. To turn on the device again, you will need to press on the  on/ off button to manually switch it on.
- If the battery is completely discharged, the device cannot be turned on immediately when the charger is connected. Allow a depleted battery to charge for a few minutes before turning on the device.

Connecting the charger improperly may cause serious damage to the device. Any damage caused by misuse is not covered by the warranty.

- The device can be used while it is charging, but it may take longer to fully charge the battery.
- If the device receives an unstable power supply while charging, the screen may not function. If this happens, unplug the charger from the device.
- While charging, the device may heat up. This is normal and should not affect the device's lifespan or performance.
- If the device is not charging properly, take the device and the charger to a Maka Service Centre.

Inserting a memory card

Your device accepts memory cards with maximum capacities of 32 GB. Depending on the memory card manufacturer and type, some memory cards may not be compatible with your device.

Some memory cards may not be fully compatible with the device. Using an incompatible card may damage the device or the memory card, or corrupt the data stored in it.

Use caution to insert the memory card right-side up as shown in the image below.

- Insert a memory card with the gold-coloured contacts facing downwards.
- Push the memory card into the slot until it locks in place.



It is recommended to reformat a memory card every time images are transferred from it to a computer, or at least once or twice a month.

Reformatting a memory card keeps data and the structure of files stored on it clean, helping to prevent error messages and missing images. Reformatting also restores the memory card, which can prevent it from becoming corrupted.

Removing the memory card

Before removing the memory card, first unmounts it for safe removal.

On the device

- 1 Press on the **OK** button to stop the device from recording
- 2 Press on the **ON/OFF** button to switch off the device
- 3 Pull out the memory card.


Do not remove the memory card while the device is transferring or accessing information. Doing so can cause data to be lost or corrupted or damage to the memory card or device. Maka GPS Technologies Group is not responsible for losses that result from the misuse of damaged memory cards, including the loss of data.

Formatting the memory card

You may choose to format your memory card on a computer or on the device.

On the device

- 1 Press on **OK** button to stop the device from recording
- 2 Press on the **MENU** button twice to enter System Setting

- 3 Press on **DOWN**  button to navigate to the function that shows Format
- 4 Press on **OK** to confirm your selection
- 5 Press on **UP/DOWN** button to select (Cancel/OK)
- 6 Press on **OK** once to confirm selection and exit our from the selection setting.

Before formatting the memory card, remember to make backup copies of all important data stored on the device. The manufacturer's warranty does not cover loss of data resulting from user actions.

Turning the device on and off

Press and hold the Power button for a few seconds to turn on the device. A welcome message will be displayed on screen as shown in the image below.



 





To turn off the device, press and hold the Power button for a few seconds again to turn off the device. A goodbye message will be displayed on screen as shown in the image below.



VR4 FHD Digital Roadcorder™ will be switch on and off automatically if you have permanently connected it to the car charger.

VIDEO SETTING

Resolution







- 1 Press on **MENU**  once into video setting
- 2 Press on **UP**  or **DOWN**  button to navigate to the function that shows Resolution
- 3 Press on **OK to enter showing 1920x1080 30P or 1280x720 30P etc**
- 4 Press on the **UP**  or **DOWN**  button to make your selection
- 5 Press on **OK** to confirm your entry and exit selection
- 6 Press on **MENU**  twice to exit Setting
- 7 Start recording by pressing **OK** button
- 8 Stop recording by pressing **OK** button again

Loop Recording

The device will continue to record by erasing the previously recorded videos. All old videos will be replaced with the new ones.






 
It is recommended to reformat a memory card every time images are transferred from it to a computer, or at least once a month to keep data and the structure of files stored on it clean, helping to prevent error messages and missing images.

It is important to make backup copies of all important data stored on the device. The manufacturer's warranty does not cover loss of data resulting from user actions.

- 1 Press on **MENU**  once to enter video setting
- 2 Press on **UP**  or **DOWN**  button to navigate to the function that shows **Loop Recording**
- 3 Press on **OK to enter for next selection : off /1min/ 2min/ 3min/ 5min**
- 4 Press on the **UP**  or **DOWN**  button make your selection
- 5 Press on **OK** to confirm your entry and exit selection
- 6 Press on **MENU**  twice to exit Setting




Exposure




Adjust exposure according to your preference. From light brightness to neutral to dimmest. Always recommended to set as +0.0 instead.

- 1 Press on **MENU**  once to enter Video Setting
- 2 Press on **UP**  or **DOWN**  button navigate to the function that shows **Exposure**
- 3 Press on **OK to enter and show : +0.0/ +1/3 or -1/3 etc**
- 4 Press on the **UP**  or **DOWN**  button to make your selection
- 5 Press on **OK** to confirm your entry and exit selection
- 6 Press on **MENU**  twice to exit Setting

Motion Detector







This function enables you to use your device as a remote surveillance camera with motion detection functionality. It uses the built-in camera to detect movements in the surrounding area using an advanced motion detection algorithm. Camera will auto record if it detects any movement.

- 1 Press on **MENU**  once to enter video setting
- 2 Press on **UP**  or **DOWN**  button to navigate to the function that shows **Motion Detection**

- 3 Press on **OK to enter and show : OFF/ ON**
- 4 Press on the **UP**  or **DOWN**  button to make your selection
- 5 Press on **OK** to confirm your entry and exit selection
- 6 Press on **MENU**  twice to exit Setting


Record Audio

You may choose to turn off the microphone so that all the recorded videos will be muted.

- 1 Press on **MENU**  once to enter video setting
- 2 Press on **UP**  or **DOWN**  button to navigate to the function that shows **Record Audio**
- 3 Press on **OK to enter and show : On/Off**
- 4 Press on the **UP**  or **DOWN**  button to make your selection
- 5 Press on **OK** to confirm your entry and exit selection
- 6 Press on **MENU**  twice to exit Setting

 





Alternatively, you can choose using the hot keys for shortcuts

Hot Keys during recording mode:

- Press on **UP** button  – Press to mute/ unmute the microphone during recording or non recording.

 





Date and Time Stamp

You have an option to display your time and date in your videos. Date and Time stamp will not be able to remove once you have activated this feature.

- 1 Press on **MENU**  once to enter video setting
- 2 Press on **UP**  or **DOWN**  button to navigate to the function that shows **Date Stamp**
- 3 Press on **OK to enter and see : ON/OFF**
- 4 Press on the **UP**  or **DOWN**  button to make your selection
- 5 Press on **OK** to confirm your entry and exit selection
- 6 Press on **MENU**  twice to exit Setting

Gravity Sensing

This function acts like an accelerometer. It measures the acceleration and gravity forces detected on the camera. At such case during recording, the device will auto do a file lock. We recommend you to set [low]








- 1 Press on **MENU**  once to enter Video Setting
- 2 Press on **UP**  or **DOWN**  button to navigate to the function that shows **Gsensor**
- 3 Press on **OK to enter and show : OFF/ LOW/ MEDIUM/ HIGH**
- 4 Press on the **UP**  or **DOWN**  button to make your selection
- 5 Press on **OK** to confirm your entry and exit selection
- 6 Press on **MENU**  twice to exit Setting

SYSTEM SETTING

Date/ Time Setup







Access the following settings to change the device's time and date.

If the battery remains fully discharged or removed from the device, the time and date is reset.

- 1 Press on **MENU**  twice to enter system setting
- 2 Press on **UP**  or **DOWN**  button to navigate to the function that shows the **Date/Time**
- 3 Press on **OK** to enter and in : **YYYY/MM/DD HRS:MM:SS**
- 4 Press on the **UP**  or **DOWN**  button to change the date and time accordingly.
- 5 Press on **OK** button to shift your entry to the next segment
- 6 Press on **MENU**  once entry complete made to exit selection
- 7 Press on **MENU**  once to exit setting






 
Auto Power Off

This function enable you to select the auto shut down of the device if the unit is not in the recording mode which help to alert driver.

- 1 Press on **MENU**  twice to enter System Setting
- 2 Press on **UP**  or **DOWN**  button to navigate to the function that shows **Auto Power Off**
- 3 Press on **OK to enter and show : OFF/ 1min/ 3min**
- 4 Press on the **UP**  or **DOWN**  button to make your selection
- 5 Press on **OK** to confirm your entry and exit selection
- 6 Press on **MENU**  once exit Setting







Screen Saver

Select timer duration for the LCD to turn off after recording starts.

- 1 Press on **MENU**  twice to enter System Setting
- 2 Press on **UP**  or **DOWN**  button to navigate to the function that shows **Screen Saver**
- 3 Press on **OK to enter and show : OFF/ 3min/ 5min/ 10min**
- 4 Press on the **UP**  or **DOWN**  button to make your selection
- 5 Press on **OK** to confirm your entry and exit selection
- 6 Press on **MENU**  once to exit Setting





 
Beep Sound

This function is to turn on/off of the the button sound.

- 1 Press on **MENU**  twice to enter system setting
- 2 Press on **UP**  or **DOWN**  button to navigate to the function that shows **Beep Sound**
- 3 Press on **OK to enter and show : ON/OFF**
- 4 Press on the **UP**  or **DOWN**  button to make your selection
- 5 Press on **OK** to confirm your entry and exit selection
- 6 Press on **MENU**  once to exit Setting






 
Language

The available language may vary depending on the region.

- 1 Press on **MENU**  twice to enter system setting
- 2 Press on **DOWN**  button to navigate to the function that shows language
- 3 Press **OK** and enter showing **English etc.**
- 4 Press on the **UP**  or **DOWN**  button to make your selection
- 5 Press on **OK** to confirm your entry and back to system setting
- 6 Press on **MENU**  once to exit Setting

TV Mode






 
Please set accordingly to match the local TV visual quality of content.

- 1 Press on **MENU**  twice to enter System Setting
- 2 Press on **UP**  or **DOWN**  button to navigate to the function that shows **TV Mode.**
- 3 Press on **OK to enter and show : NTSC/ PAL**
- 4 Press on the **UP**  or **DOWN**  button to make your selection
- 5 Press on **OK** to confirm your entry and exit selection
- 6 Press on **MENU**  once to exit Setting

Note : Recommended to set the mode : PAL (Common usage in Asia)

Frequency

Please set accordingly to the local power supply respectively; 50Hz or 60Hz.

- 1 Press on **MENU**  twice to enter System Setting
- 2 Press on **UP**  or **DOWN**  button to navigate to the function that shows **FREQUENCY**.
- 3 Press on **OK to enter and show : 50Hz/ 60Hz**
- 4 Press on the **UP**  or **DOWN**  button to make your selection
- 5 Press on **OK** to confirm your entry and exit selection
- 6 Press on **MENU**  once exit Setting

Default Setting

Set the system parameters to the default value.

 










 
- 1 Press on **MENU**  twice to enter into System Setting
- 2 Press on **UP**  or **DOWN**  button to navigate to the function that shows **DEFAULT SETTING**
- 3 Press on **OK**
- 4 Press on the **UP**  or **DOWN**  button to make your selection
- 5 Press on **OK** to confirm your entry and exit selection
- 6 Press on **MENU**  once to exit Setting






 
PHOTO SETTING

Resolution

- 1 Press on **M (Mode) button** once into Photo Mode
- 2 Press on **MENU**  once to enter Photo Setting
- 3 Press on **UP**  or **DOWN**  button to navigate to the function that shows **Resolution**
- 4 Press on **OK to enter showing 12M 4032x3024 or 10M 3648x2736 etc**
- 5 Press on the **UP**  or **DOWN**  button to make your selection
- 6 Press on **OK** to confirm your entry and exit selection
- 7 Press on **MENU**  once to exit Setting
- 8 Press **OK** button for shooting







Sequence

This function enable shooting of 3 photo in one single shot.

- 1 Press on **M (Mode) button** once into Photo Mode
- 2 Press on **MENU**  once to enter Photo Setting
- 3 Press on **UP**  or **DOWN**  button to navigate to the function that shows **Sequence**
- 4 Press on **OK to enter showing ON/OFF**
- 5 Press on the **UP**  or **DOWN**  button to make your selection
- 6 Press on **OK** to confirm your entry and exit selection
- 7 Press on **MENU**  once to exit Setting
- 8 Press **OK** button for 5 photo shooting in 1 single shot







Quality

This function enable to set the quality of the photo to be taken.
The lower the quality, the memory taken will be lesser.

- 1 Press on **M (Mode) button** once into Photo Mode
- 2 Press on **MENU**  once to enter Photo Setting
- 3 Press on **UP**  or **DOWN**  button to navigate to the function that shows **Quality**
- 4 Press on **OK to enter showing FINE/NORMAL/ECOMONY**
- 5 Press on the **UP**  or **DOWN**  button to make your selection
- 6 Press on **OK** to confirm your entry and exit selection
- 7 Press on **MENU**  once to exit Setting
- 8 Press **OK** button for shooting







Sharpness

This function enable to select the photo taking to be more distinctive or clearer picture during photo shooting.

- 1 Press on **M (Mode) button** once into Photo Mode
- 2 Press on **MENU**  once to enter Photo Setting
- 3 Press on **UP**  or **DOWN**  button to navigate to the function that shows **Sharpness**
- 4 Press on **OK to enter showing STRONG/NORMAL/SOFT**
- 5 Press on the **UP**  or **DOWN**  button to make your selection
- 6 Press on **OK** to confirm your entry and exit selection
- 7 Press on **MENU**  once to exit Setting
- 8 Press **OK** button for shooting







White Balance

This function enable to select the balancing of the lighting effect on different environment. Recommended to be set as **(AUTO)**

- 1 Press on **M (Mode) button** once into Photo Mode
- 2 Press on **MENU**  once to enter Photo Setting
- 3 Press on **UP**  or **DOWN**  button to navigate to the function that shows **White Balance**
- 4 Press on **OK to enter showing**
AUTO/DAYLIGHT/CLOUDY/TUNGSTEN/FLUORESCENT
- 5 Press on the **UP**  or **DOWN**  button to make your selection
- 6 Press on **OK** to confirm your entry and exit selection
- 7 Press on **MENU**  once to exit Setting
- 8 Press **OK** button for shooting







ISO

This function enable to set the light sensitivity of the photo to be taken. The higher the number, the more sensitive to light the photo will be taken. Recommended to use as **(AUTO)**







- 1 Press on **M (Mode) button** once into Photo Mode
- 2 Press on **MENU**  once to enter Photo Setting
- 3 Press on **UP**  or **DOWN**  button to navigate to the function that shows **ISO**
- 4 Press on **OK to enter showing 100/200/400/AUTO**
- 5 Press on the **UP**  or **DOWN**  button to make your selection
- 6 Press on **OK** to confirm your entry and exit selection
- 7 Press on **MENU**  once to exit Setting
- 8 Press **OK** button for shooting

Exposure

This function enable to set the function of the brightness the photo to be taken or darker. Recommended **(+0.0)**






 
- 1 Press on **M (Mode) button** once into Photo Mode
- 2 Press on **MENU**  once to enter Photo Setting
- 3 Press on **UP**  or **DOWN**  button to navigate to the function that shows **Exposure**
- 4 Press on **OK to enter showing +0.0/+1/3 or -1/3 etc**
- 5 Press on the **UP**  or **DOWN**  button to make your selection
- 6 Press on **OK** to confirm your entry and exit selection
- 7 Press on **MENU**  once to exit Setting
- 8 Press **OK** button for shooting

Anti-Shaking







- 1 Press on **M (Mode) button** once into Photo Mode
- 2 Press on **MENU**  once to enter Photo Setting
- 3 Press on **UP**  or **DOWN**  button to navigate to the function that shows **Anti-Shaking**
- 4 Press on **OK to enter showing ON/OFF**
- 5 Press on the **UP**  or **DOWN**  button to make your selection
- 6 Press on **OK** to confirm your entry and exit selection
- 7 Press on **MENU**  once to exit Setting
- 8 Press **OK** button for shooting

Quick Review

This function meant for photo was review after each shot was taken before it save into the memory and proceed with next photo shot



- 1 Press on **M (Mode) button** once into Photo Mode
- 2 Press on **MENU**  once to enter Photo Setting
- 3 Press on **UP**  or **DOWN**  button to navigate to the function that shows **Quick Review**
- 4 Press on **OK to enter showing : OFF/2SEC/5SEC**
- 5 Press on the **UP**  or **DOWN**  button to make your selection
- 6 Press on **OK** to confirm your entry and exit selection
- 7 Press on **MENU**  once to exit Setting
- 8 Press **OK** button for shooting

Date Stamp

- 1 Press on **M (Mode) button** once into Photo Mode
- 2 Press on **MENU**  once to enter Photo Setting
- 3 Press on **UP**  or **DOWN**  button to navigate to the function that shows **Date Stamp**
- 4 Press on **OK to enter showing : OFF/Date/Date & Time**
- 5 Press on the **UP**  or **DOWN**  button to make your selection
- 6 Press on **OK** to confirm your entry and exit selection
- 7 Press on **MENU**  once to exit Setting
- 8 Press **OK** button for shooting





GENERAL

Playback Mode (Video)




- 1 Stop recording by pressing on the **OK** button
- 2 Press 2x **M (Mode)** button to switch from recording to playback mode
- 3 Press and hold **UP**  or **DOWN**  button to navigate thru the video files
- 4 Press on **OK** to **START** playing
- 5 Press on **OK** again to **STOP** playing

Delete Files

To delete one particular file or all the file in one time.





- 1 Press on **UP**  or **DOWN**  button to navigate thru the video files
- 2 Press on **MENU**  to select Delete/Protect this file
- 3 Press on **DOWN**  button once to select Delete
- 4 Press on **OK** once show delete current AVI

Playback Mode (Photo)

- 1 Press 2x **M (Mode)** button to switch from recording to photo view mode
- 2 Press **UP**  or **DOWN**  button to navigate thru the photo files  taken
- 3 Press on **OK** once you have found the file you wish to view

Delete Files

To delete one particular file or all the file in one time.

- 1 Press on **UP**  or **DOWN**  button to navigate thru the photo files
- 2 Press on **MENU**  to select Delete/Protect this file
- 3 Press on **DOWN**  button once to select Delete
- 4 Press on **OK** once show delete current file

Question	Reason	Solution
The captured image is not stored	<ol style="list-style-type: none"> 1 MicroSD card might be full or malfunction. 2 Image is not saved before the power outage. 	<p>Reformat the card or replace a new MicroSD</p> <p>Make sure to stop recording before shutting down.</p>
All buttons are invalid	<ol style="list-style-type: none"> 1 Procedural error or faulty Operation 2 MicroSD Card might be error or faulty 	<p>Press RESET button to restart the DVR.</p> <p>Change a new Sd card or reformat the card</p>
Device cannot be turn on	Device might be low in battery.	Charge the Battery.
Screen Auto power-off	<ol style="list-style-type: none"> 1 Screen Saver function is enabled. 2 Low Battery. 	<ol style="list-style-type: none"> 1 Press on UP button disable the screen saver mode. 2 Charge the battery
Unable to record videos	<ol style="list-style-type: none"> 1 Memory card might be full. 2 If loop recording has been enabled, memory card might be corrupted. 	<ol style="list-style-type: none"> 1 Check your memory card's space. Delete files if required. 2 Reformat your Memory card , if issue still persists, replace a new memory Card
Auto stop recording in video mode	Use a compatible SDHC microSD card for HD video recording.	Get a microSD card that has minimum 8GB Class 10 speed.
Encounter "file error" when trying to playback pictures or videos	MicroSD card might be corrupted. There bad sectors in the card.	Reformat the memory card.

General Troubleshooting

Question	Reason	Solution
No image is displayed on a high-definition TV screen	1 Cable plug might not be plugged in properly. 2 Wrong TV Input mode	1 Ensure AV/HDMI cable is plug into the TV properly. 2 Refer to the back panel of your TV to Track the correct TV input. Make sure you have selected the correct input.
Hazy Images	Lens might be dirty.	Check if there are fingerprints or dust on the lens. Clean it with a micro fabric cloth if necessary.
There are horizontal stripes interference on the image	This could be due to wrong light frequency setting	Please set according to the local power supply respectively;50Hz or 60Hz. For SG/MY:50hz
No image is displayed on a high-definition TV screen	1 Cable plug might not be plugged in properly. 2 Wrong TV Input mode	1 Ensure AV/HDMI cable is plug into the TV properly. 2 Refer to the back panel of your TV to track the correct TV input. Make sure you have selected the correct input.